HOTEL SUPPLIES

YirouFang Textile Manufacture Co.,Ltd.





Visit Factory

360° VR panoramas we provide

http://www.yrftextile.com

Email: info@yrftextile.com


Product Show



High-strength Aluminum Alloy Cover

Load-bearing, strong and reliable

SUITABLE FOR THE DECORATION OF A VARIETY OF DIFFERENT AREAS

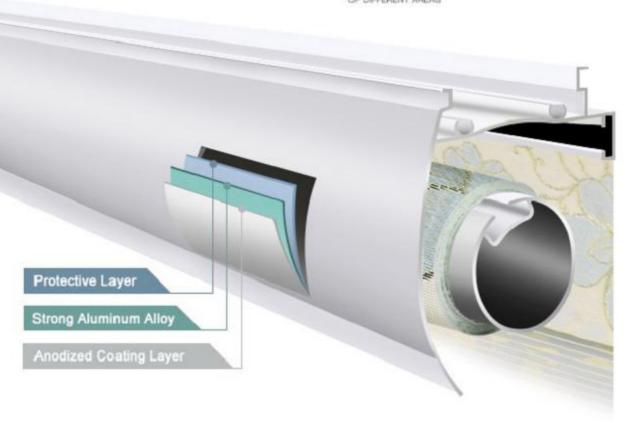


Product Display

apply to various area decoration

SUITABLE FOR THE DECORATION OF A VARIETY OF DIFFERENT AREAS



Living Room/ Balcony

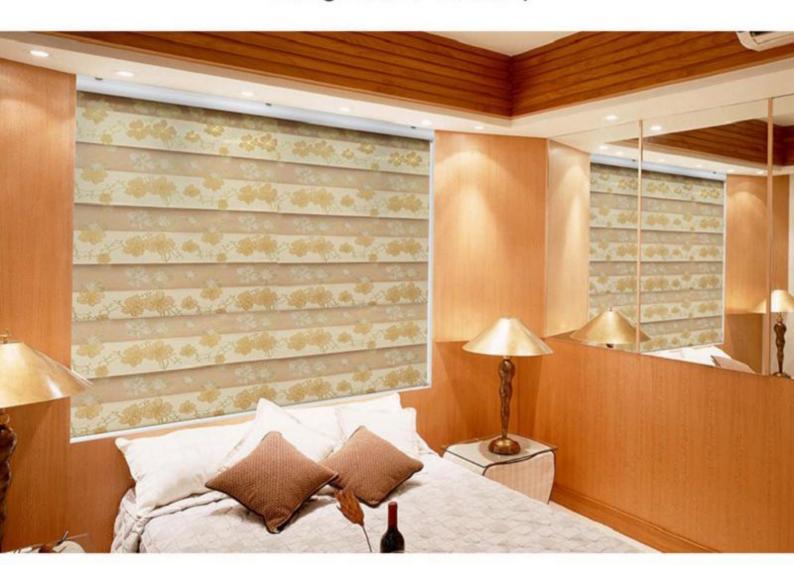



Bathroom/ Shower Room





More Deatils

two different dust cover

SUITABLE FOR THE DECORATION OF A VARIETY OF DIFFERENT AREAS

ALUMINUM ALLOY COVER

White Dust cover







ALUMINUM ALLOY COVER

Bronzing Jacquard Process



ALUMINUM ALLOY COVER

Child Safety Ball Chain







ALUMINUM ALLOY COVER

Bottom Bar



Color Optional

Suitable for a variety of decoration styles

SUITABLE FOR THE DECORATION OF A VARIETY OF DIFFERENT AREAS







Tips: window depth (D) at least 6cm

Customized Size:

Width Range 20~180cm

Max Height 180cm

Outside Mount:

Roller blinds width=window width+20cm

Roller Blinds height=window height+20cm

Inside Mount:


Roller blinds width=window width-1 cm


Roller Blinds height=window height



Please be note: Roller blinds width=Fabric width+3cm
The width of the curtain is include the brackets width

Installation Ways 03.

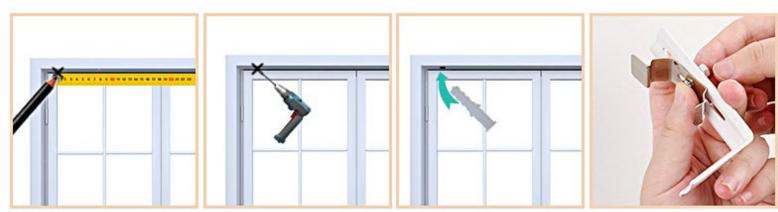



02. Drilling on the wall

03. Plug the expansion screw into holes 04. Fix the installation code

on the switch head



05. Fix the installation code on the wall



06. Fix inside end first and then lift the outside end to hold it



Hear a clicking sound, installation is successful



08. Installation Success

Measure & Installation


Accessories


Packing parts -






- Measurement and Installation Method -

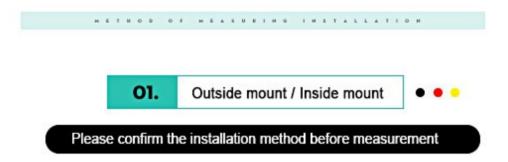

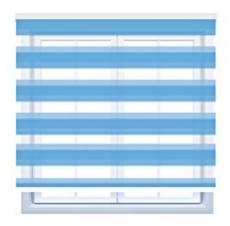













Inside or Outside Mount

Outside Mount Only

Inside or Outside Mount

02.

How to Measure .

